

DSC® WIRELESS BATTERY REPLACEMENT GUIDE



508-476-2816

Remember to use ONLY Duracell or Energizer batteries!



CR2032



CR123



CR123



AA



CR2



CR123